


Fig. 1

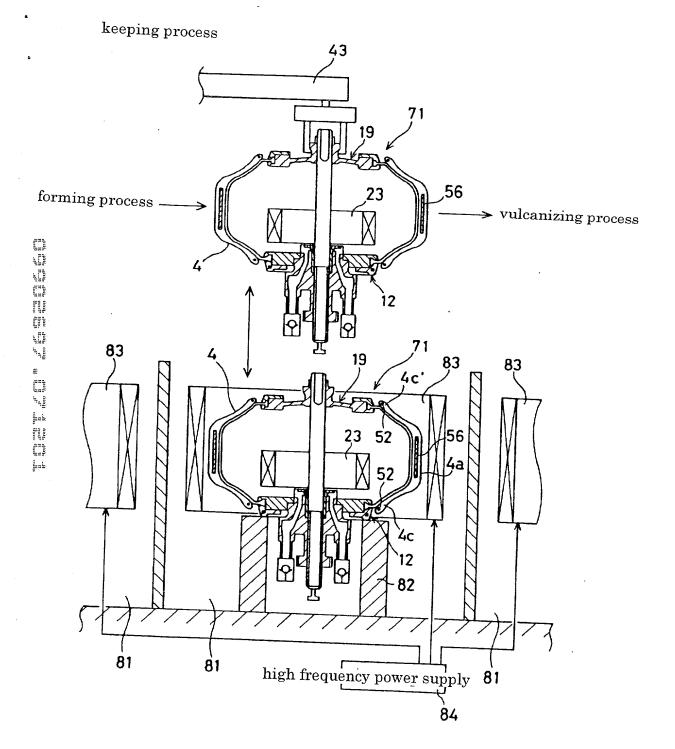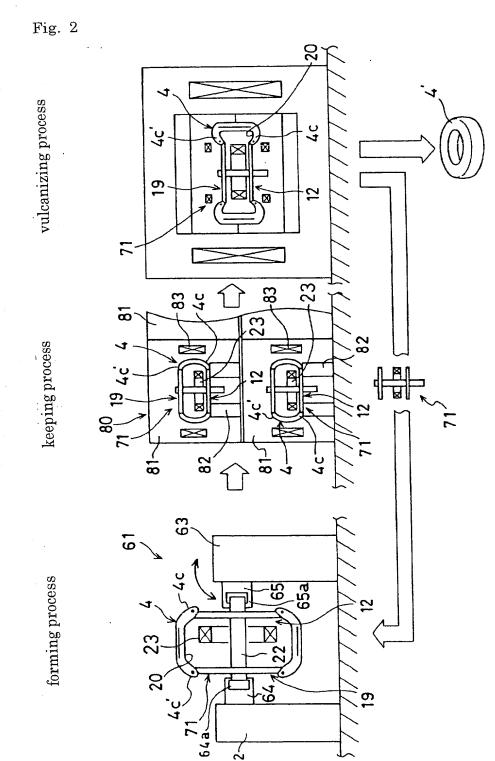

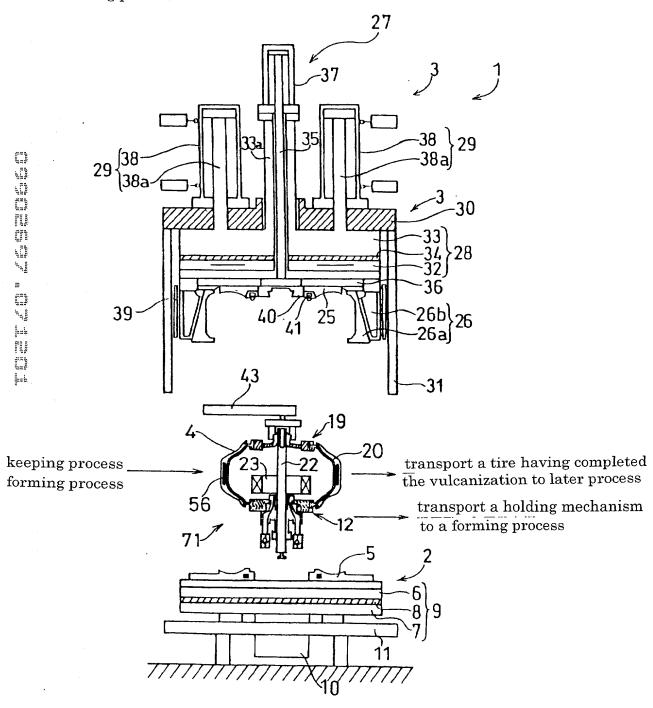

62~

Fig. 3 vulcanizing process





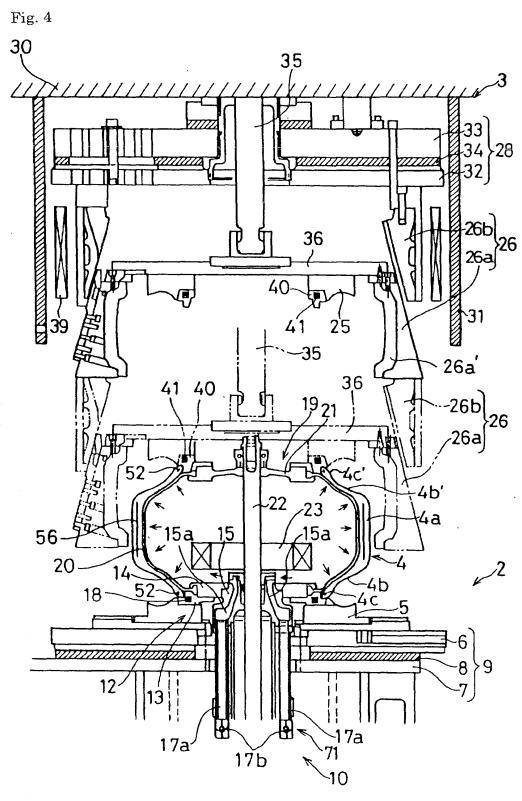


Fig. 5

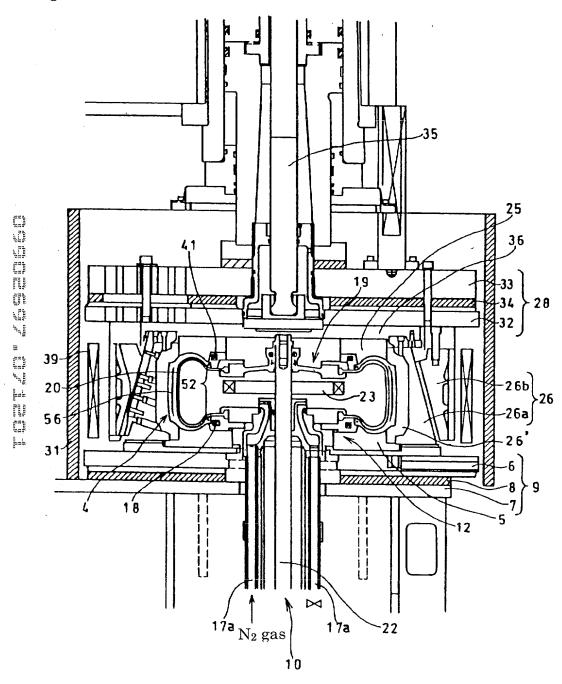


Fig. 6 გ მ 20 -20b -20a 4, a ထ Ś high frequency power supply 4 p. 52 ٠, Ġ 23 (က $\boldsymbol{\omega}$ 40 56 s, Sa വ တ 20 90 2 Ø 0

Fig. 7

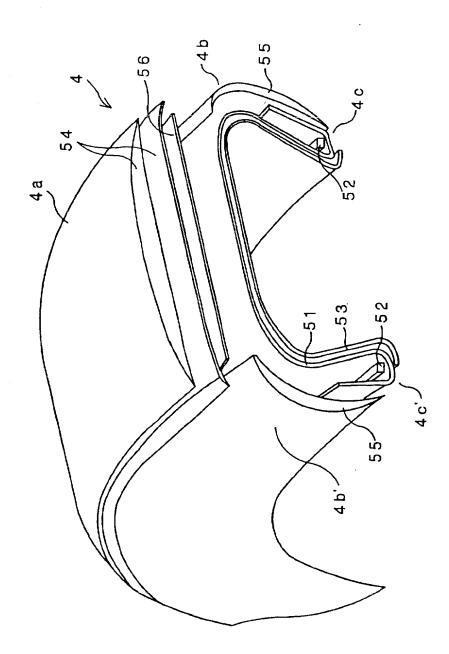


Fig. 8(a)

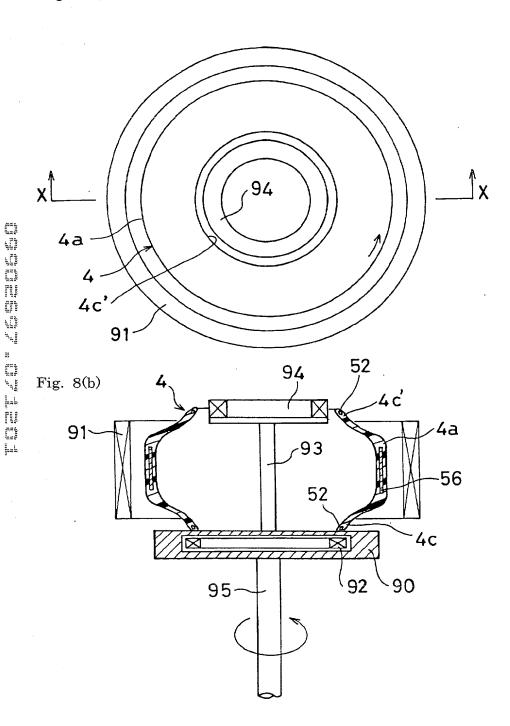
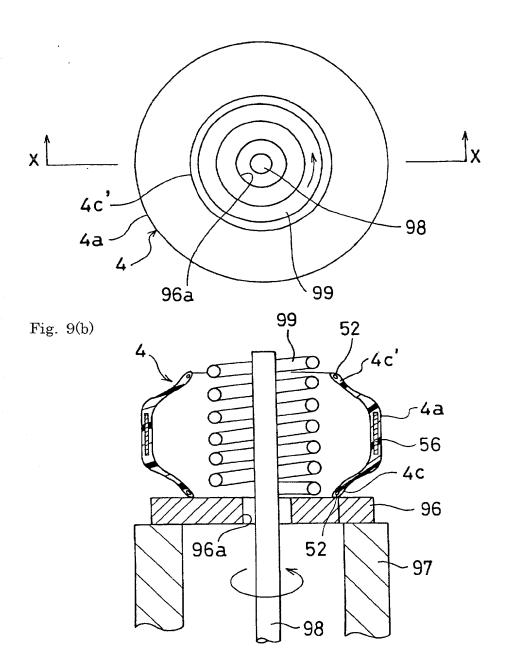
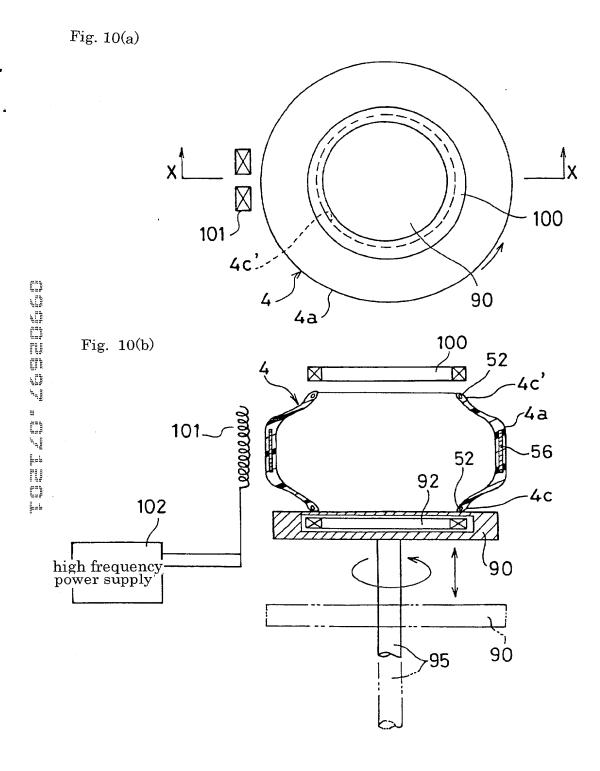


Fig. 9(a)





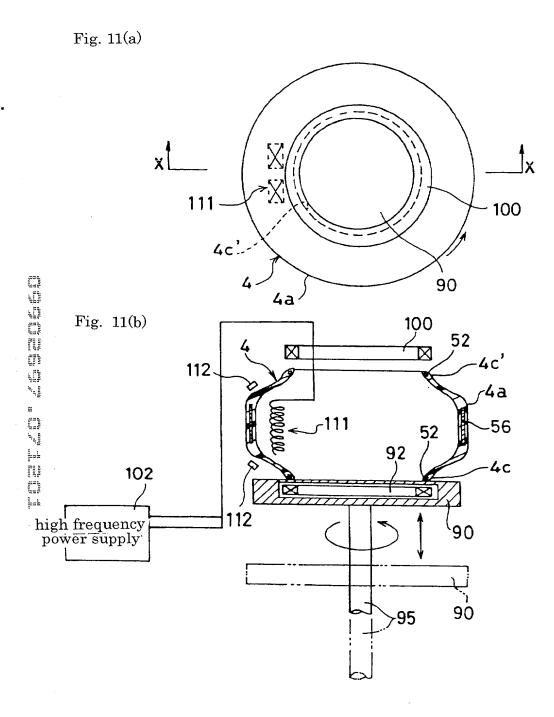


Fig. 12(a)

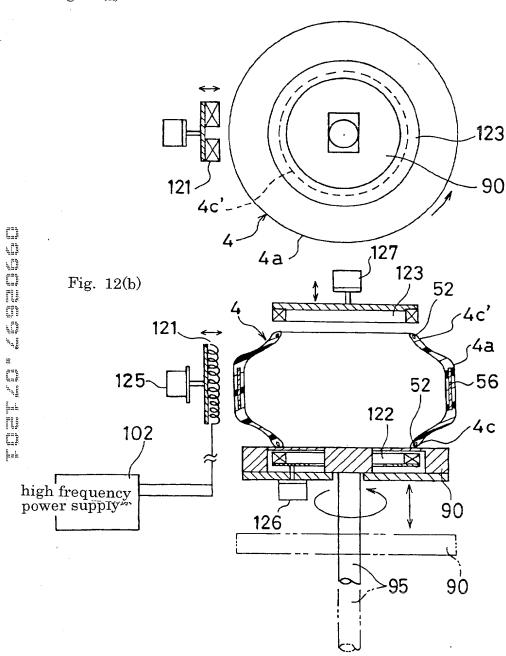


Fig. 13(a)

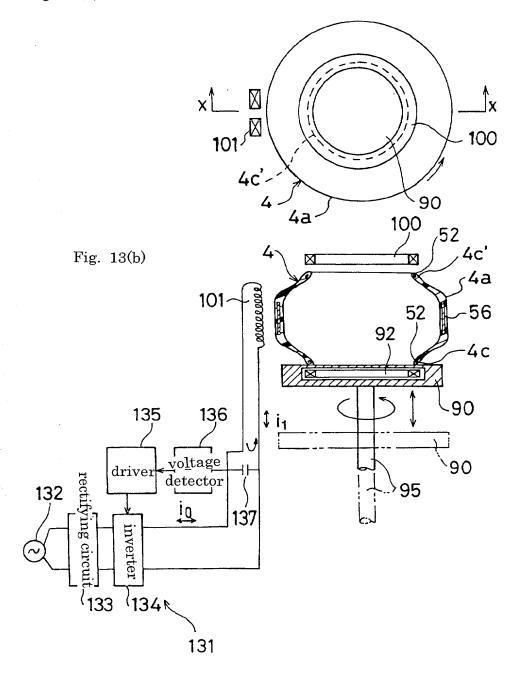
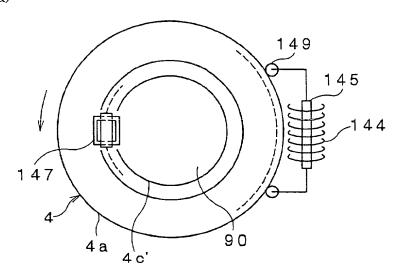


Fig. 14(a)



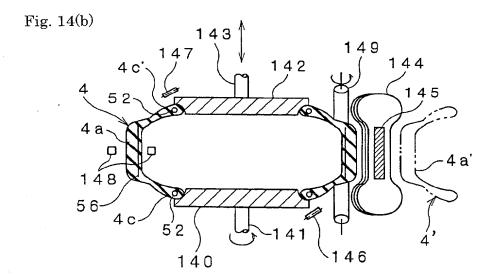
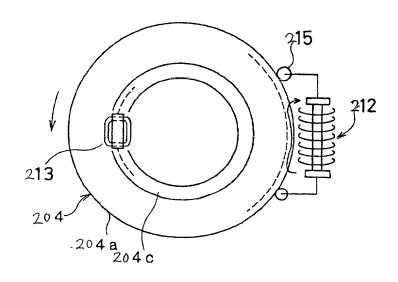
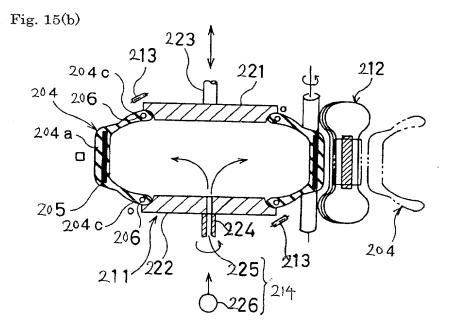
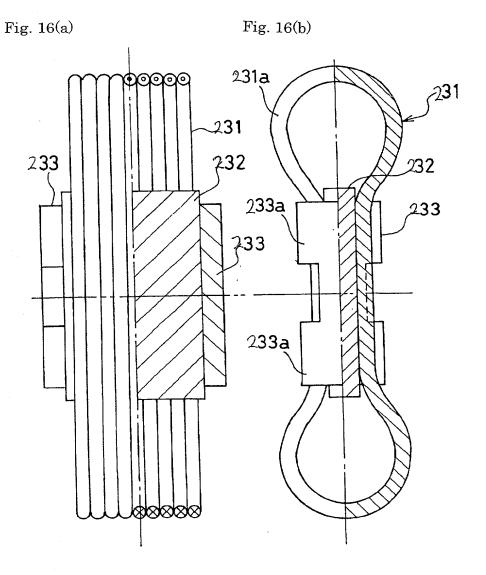


Fig. 15(a)









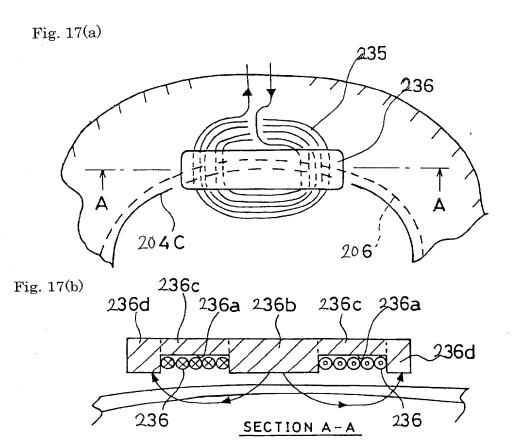


Fig. 18(a)

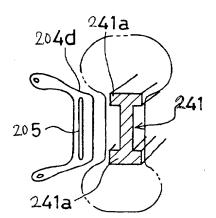


Fig. 18(b)

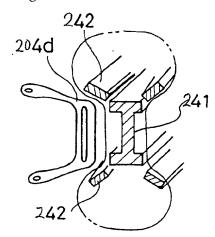
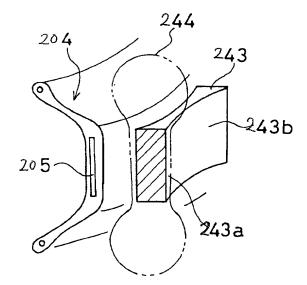


Fig. 19



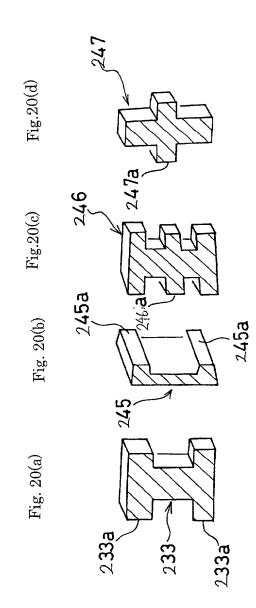


Fig. 21

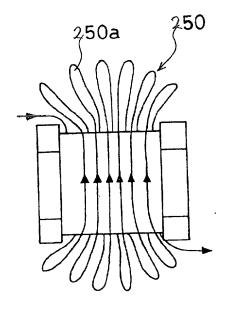


Fig. 22

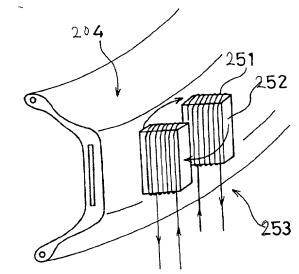


Fig. 23

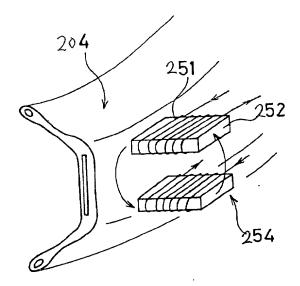


Fig. 24

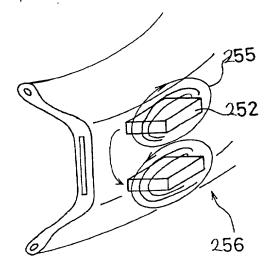


Fig. 25

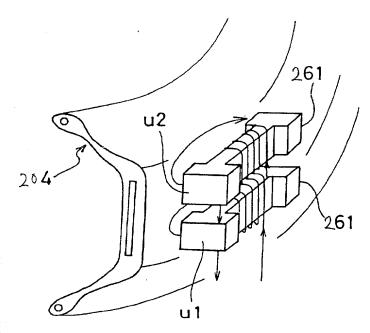


Fig. 26(a)

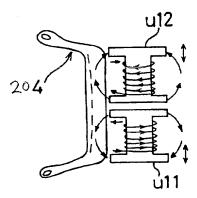


Fig. 26(c)

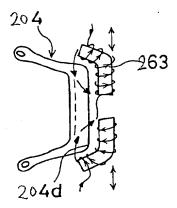


Fig. 26(b)

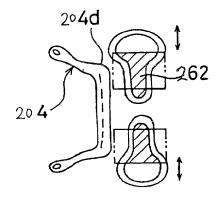


Fig. 26(d)

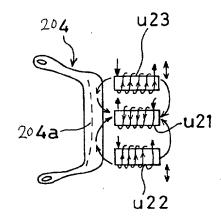


Fig. 27

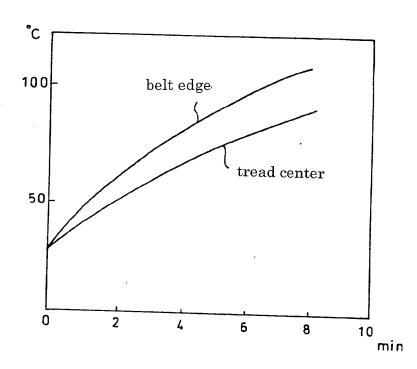


Fig. 28

